

NO.	BOM CODE		DOSAGE
1	MH600T-42081-01	AXLE	1
2	MH600T-42291-02	WHEEL SUPPORTER	1
3	6NH-08D	NUT	11
4	MH600T-42204-01	WASHER	2
5	MH600T-42440-01	WHEEL	1
6	6SFDD08-25D	BOLT	9
7	MH600T-42202-04	WASHER	4
8	MH600T-42202-02	GASKET	9
9	MH600T-42181-02	FENDER	1
10	MH600T-42342-01	SPRING	1
11	MH600T-42091-01	LOCKER PIN	1
12	6NH-10D	NUT	1
13	6SFDD10-65D	BOLT	1
14	MH600T-42001-02	HANDLE BAR	1
15	MH600T-42020-01	RUBBER COVER	2
16	MH600T-42091-03	BLADE LOCKER	2
17	MH600T-42231-01	LEFT BLADE (DOUBLE)	1
18	MH600T-42024-02	DUST COVER	2
19	6SFDD08-20D	BOLT	10
20	MH600T-42024-03	BELT COVER	1
21	MH600T-42342-03	tensioning wheel spring	1
22	MH360T-42146-01	GEARBOX	1
23	MH600T-42231-02	RIGHT BLADE (DOUBLE)	1
24	MH600T-42440-04	tensioning wheel	1
25	MH600T-42342-01	HOUSING	1
26	MH600T-42087-01	drag strut	1
27	6NH-06D	nut	1
28	6SQDD06-35D	bolt	1
29	MH600T-42122-01	belt wheel	1
30	MH600T-42345-01	BELT	1
31	MH600T-42440-03	CLUTCH CABLE	1
32	6SFDD08-30D	BOLT	5
33	MH600T-42087-02	RIGHT HANDLE ASSEM.	1
34	MH600T-42087-03	RIGHT HANDLE	1
35	MH600T-42440-02	THROTTLE CABLE	1
36	MH600T-42141-01	HANDLE HOLDER	1
37	MH600T-42202-01	WASHER	17
38	6SQDD06-45D	BOLT	1
39	MH600T-42331-01	Handle bar tube	2
40	6NE-06D	NUT	1
41	MH600T-42181-01	Level restrict board	1
42	MH600T-42087-04	Level bar	1
43	MH600T-42342-02	Level spring	1
44	6NH-05D	nut	1
45	MH600T-42001-01	clutch bar	1
46	6SQDD05-35B	BOLT	1
47	6SFDD08-35D	BOLT	1
48	MH600T-42291-01	GEARBOX HOLDER	1
49	MH600T-42141-02	ENGINE HOLDER	1
50	6SQDD10-35B	BOLT	1
51	MH600T-42091-02	KEY	1
52	MH600T-42122-02	Belt wheel for engine	1
53	MH600T-42600-SG475	ENGINE SG475 139CC	1