

1	51010410021	Engine assembly	1
2	02050150047	Pump assembly	1
2-1	03010070022	Hexagon socket cap screws M5×45	4
2-2	02060030183	Nylon Washer	4
2-3	02060030168	Pump Cover	1
2-4	02060030169	Pump Cover O-ring Φ160×4	1
2-5	02060030170	Machanical seal	1
2-6	02060030171	Impeller	1
2-7	02060030172	Volute Casting	1
2-8	02060030173	Volute Casting O-ring Φ41×3.55	1
2-9	02060030174	Pump Housing	1
2-10	02060030175	Discharge Flange Gasket	1
2-11	02060030176	Discharge Flange	1
2-12	03010070023	hexagon head screws M6×20	7
2-13	02060030177	Priming Cap O-ring Φ18×3.1	2
2-14	02060030178	Priming Cap	2
2-15	02060030179	Return Valve Gasket	1
2-16	02060030180	Inlet Valve	1
2-17	02050150074	Pipe Connector Gasket	2
2-18	02060030181	Pipe Connector	2
2-19	02060030182	Connector Nut	2
2-20	03010070019	Hexagon head screws M8×25	4
3	02050150053	Base assembly	1
3-1	02080030010	Shock absorbing rubber plug	4
3-2	02050150043	Water pump base	1
3-3	02080050043	Shock absorbing rubber plug	2
3-4	03020020032	Screw M4×12	2
3-5	03040020019	Washer Φ5	2
3-6	03040010009	Washer Φ5	4
3-7	03010060087	Screw M5×12	4
4	03010070007	Hexagon head screws M8×30	2
5	03040020018	Washer Φ8	2
6	03050010008	Washer Φ8	2
7	03030010017	Hexagon full nuts M8	2
8	02050150032	Throttle Lever	1
9	03040020020	Washer Φ5	1
10	03050010015	Washer Φ5	1
11	03030010013	Hexagon full nuts M5	1
12	02050150048	Handle	1
13	70080010003	Fuel mixture bottle (0.6L)	1
14	03080030004	Box spanner 17×19	1
15	03080020007	Open spanner 8×10	1
16	03080010006	Alley key (S=4/S=5)	1
17	02020040011	Clamp φ32	3
18	02060030076	Screen assembly	1